


WQ 170

Instruction manual

Features:

- Control Buttons-

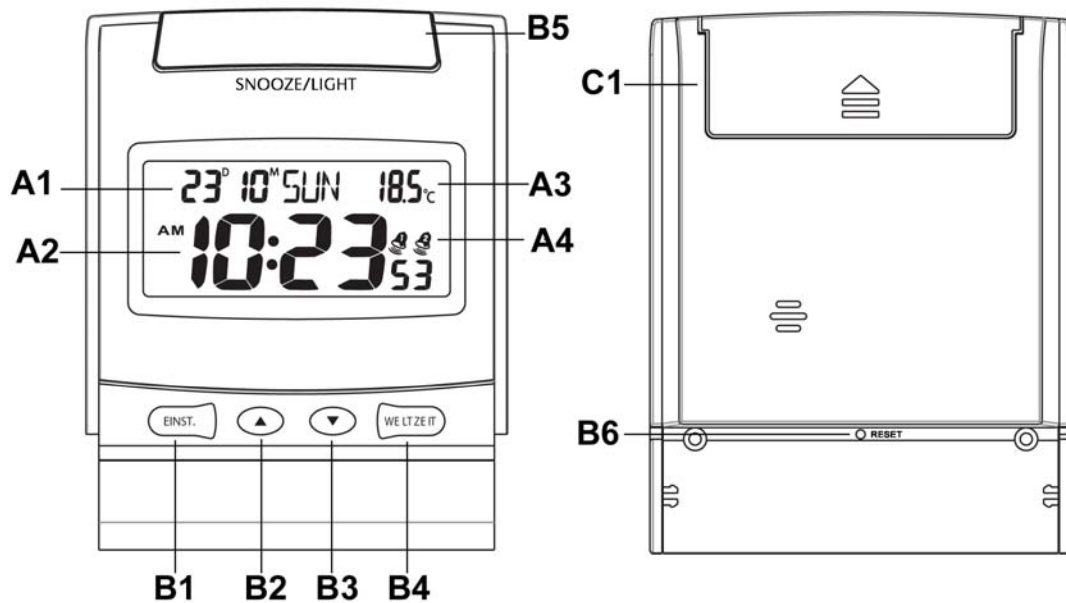

Front View

Back View

A- LCD Display:

A1: Date & Week

A3: Temperature

A2: Time display

A4: Alarm icon

B- Buttons

B1: "MODE" BUTTON

B3: "▼" BUTTON

B5: "SNOOZE/LIGHT" BUTTON


B2: "▲" BUTTON

B4: "W-TIME" BUTTON

B6: "RESET" BUTTON

C1- Battery Compartment

- World Time Display

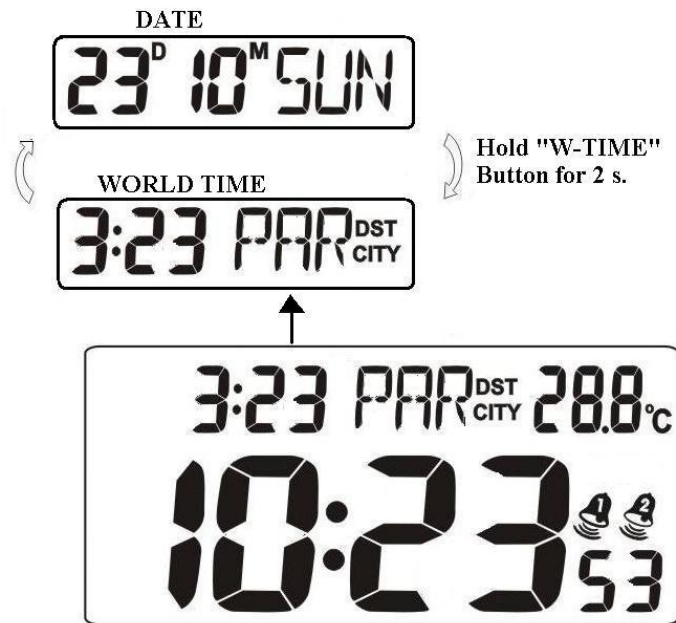

- 12/24 Hour time display selectable
- Day of week in 7 languages selectable: English, German, French, Spanish, Italian, Dutch and Denmark
- 32 Cities World time display
- Local and World time display in Duo Time mode
- 2 Alarms function
- EL back light

Set up:

- Remove the insulator.
- 1 x AAA batteries inserted
- Press "RESET" BUTTON (B6) on the back of the unit with a pin.

Time Setting

- Hold "MODE" button (B1) until Hour digit flashes.
- Press "▲" (B2) or "▼" (B3) button to adjust : Year, Month, Date, Language for week, Hour, Minutes, Second and Local time DST on & off.
(Local time DST should be set to "OFF" if DST is not applicable)
- There are 7 languages, English, German, French, Spanish, Italian, Dutch and Denmark, for day-of-week. The languages and their selected abbreviations for each day of the week are shown in the following table.

Language	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
English, ENG	SUN	MON	TUE	WED	THU	FRI	SAT
German, GEM	SON	MON	DIE	MIT	DON	FRE	SAM
French, FRA	DIM	LUN	MAR	MER	JEU	VEN	SAM
Spanish, ESP	DOM	LUN	MAR	MIE	JUE	VIE	SAB
Italian, ITA	DOM	LUN	MAR	MER	GIO	VEN	SAB
Dutch, NET	ZON	MAA	DIN	WOE	DON	VRI	ZAT
Denmark, DAN	SON	MAN	TIR	ONS	TOR	FRE	LOR

- Press “MODE” button (B1) to confirm each setting.

Note: Second can only be adjusted to zero

12/24hour format display

Press “▼” (B3) button to change 12/24 hour format display.

Display world time function:

- Hold “W-TIME” button (B4) for 2 seconds to enter world time mode.
- Press “▲” (B2) or “▼” (B3) to select City.
- Press “W-TIME” button (B4) to switch DST mode on or off of the selected city.

32 Cities and its short form.




CITY	Short form
1. Amsterdam	AMS
2. Barcelona	BCN
3. Copenhagen	CPH
4. Frankfurt	FRA
5. Paris	PAR
6. Amman	AMM
7. Athens	ATH
8. Cape Town	CPT
9. Cairo	CAI
10. Istanbul	IST
11. Jerusalem	JRS

CITY	Short form
12. Moscow	MOW
13. Dubai	DBX
14. Bangkok	BKK
15. Beijing	PEK
16. Hong Kong	HKG
17. Singapore	SIN
18. Tokyo	TYO
19. Sydney	SYD
20. Wellington	WLG
21. Dublin	DUB
22. London	LON

CITY	Short form
23. Rio de Janeiro	RIO
24. Falkland Lsds	FAL
25. Havana	HAV
26. New York	NYC
27. Washington DC	WAS
28. Ottawa	YOW
29. Chicago	CHI
30. Mexico City	MEX
31. Los Angeles	LAX
32. Alaska	ALA

- Home city setting :
Select your home city and then press and hold “▲” (B2) button 3 second. The unit initial home city is German.

2 Daily alarm Setting:

- Press “MODE” button (B1) to select alarm 1 “” or alarm 2 “”.
- “” will flash if alarm 1 is selected.
- Press “▲” (B2) to switch the alarm on or off.
- When viewing the alarm time, hold “MODE” button (B1) for 2 seconds and press “▲” (B2) or “▼” (B3) to adjust the alarm time.
- Press “MODE” button (B1) to confirm each setting.

Snooze Alarm Function:

- Press “SNOOZE/LIGHT” button (B5) when alarming. The alarm snoozes for 4 minutes, then it alerts again.
- Simply press other buttons to stop snooze alarm.

Back Light

- Press “SNOOZE/LIGHT” button (B5), back light states for 3 seconds.
- Back light state for 3 seconds when alarm alerts.

Notes/Remarks:

- *Use a pin to press the “RESET” button (B6) if the Unit does not work properly.*
- Never use the clock in bathroom or any other area with high humidity
- The operating temperature of the clock is 0°C–60°C.
- The clock loses its time information when the battery is removed