

## WT 435 – Digital Clock with Words



### Features:

1. Time and date displayed in digits.
2. Time displayed in words (German/English).

### Keys:

1. MODE
2. +
3. -

### Power Supply:

1. 2 x AAA batteries
2. 4.5V/230V AC/DC adapter

### Quick Setup:

#### Use of adapter:

Insert the AC/DC adapter to any 230 AC household outlet. Then insert the DC jack to the back case of your unit. **The display is lighted all the time while using the adapter!**

#### Use of batteries:

Slide down the battery cover at the back of your clock, then insert 2 x AAA batteries to the battery compartment, according to +/- polarity. Then replace the battery cover.

**While using batteries, the display will only have light for 5 seconds after starting and while pressing any button on the clock!**

### LCD Display:

04:15 08/07/2013

VIERTEL NACH VIER

QUARTER PAST FOUR

### Function of Keys:

#### 1. MODE

- 1) Press MODE for 3 seconds to enter into time and date setting mode and to confirm each section of the setting mode.
- 2) On normal mode, press MODE to switch between digits mode and languages (German/English) mode.

## **2. +**

1) On setting mode, press + to increase time or date.

## **3. -**

1) On setting mode, press – to decrease time or date.

## **Time Display:**

1. Time in digits displays exact hour and minute, and will change every minute.
2. Time in languages (German/English) changes every 5 minutes, that means it will only display 00:05, 00:10, 00:15.....23:55, 24:00 in words. For example, it displays 7:55 in words when it is between 7:53-7:57, and will change to 8:00 in words when it is between 7:58-8:02.

## **Time and Date Setting:**

1. Press MODE for 3 seconds to enter into time and date setting mode. The hour value of the time display flashes.
2. Press the + or – button to set the desired value.
3. Confirm your setting by pressing the MODE button. The minute indicator of the time display blinks.
4. Press the + or – button to set the desired value.
5. Confirm your setting by pressing the MODE button. The day indicator flashes in the date display.
6. Press the + or – button to set the desired value.
7. Confirm your setting by pressing the MODE button. The month indicator flashes in the date display.
8. Press the + or – button to set the desired value.
9. Confirm your setting by pressing the MODE button. The year indicator flashes in the date display.
10. Press the + or – button to set the desired value.
11. Confirm your setting by pressing the MODE button.

## **Trouble Shooting:**

If your clock displays irrelevant time or does not function properly, which may be caused by electro-static discharge or other interference, unplug the DC jack to disconnect the AC power and remove the batteries. The clock will be reset to default settings and you need to set it again.

## **Care of your LCD Clock:**

1. Do not expose the unit to extreme temperature, water or direct sunlight
2. Avoid contact with any corrosive materials
3. Do not subject the unit to excessive force, dust or humidity
4. Do not open the inner back case or tamper with any components of this unit
5. Only use the original AC/DC adapter with correct specifications or voltage

**Consideration of duty according to the battery law**



Old batteries do not belong to domestic waste because they could cause damages of health and environment. You can return used batteries free of charge to your dealer and collection points. As end-user you are committed by law to bring back needed batteries to distributors and other collecting points!



This symbol means that you must dispose of electrical devices from the General household waste when it reaches the end of its useful life. Take your charger to your local waste collection point or recycling centre. This applies to all countries of the European Union, and to other European countries with a separate waste collection system.