


WT475 - INSTRUCTION MANUAL

LED ALARM CLOCK WITH TEMPERATURE


Front View-Time display



 
Front View-Temperature display

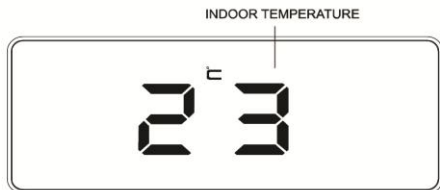

Top View

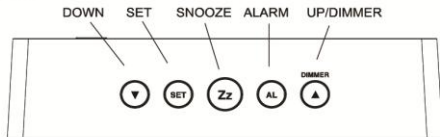 

Back View

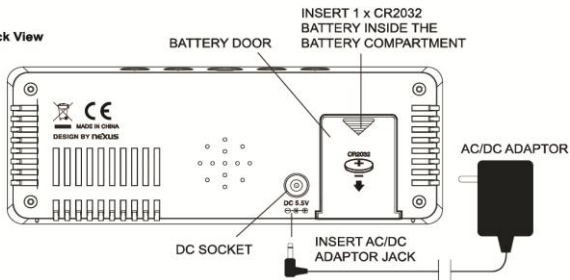 

Words in the figure:

Figure 1:	ENGLISH	
	<u>Front View-Time display</u>	
	TIME	
	ALARM ON	
	<u>Front View-Temperature display</u>	
	INDOOR TEMPERATURE	
	<u>Top View</u>	
	DOWN	
	SET	
	SNOOZE	
	ALARM	
	UP/DIMMER	
	<u>Back View</u>	
	BATTERY DOOR	
	INSERT 1 x CR2032 BATTERY INSIDE THE BATTERY COMPARTMENT	
	AC/DC ADAPTOR	
	INSERT AC/DC ADAPTOR JACK	
	DC SOCKET	

QUICK SETUP





 

 
 
Step 1 Slide open the battery cover at the back of your clock, then insert 1 x CR2032 Lithium battery to the battery compartment. Make sure +/- polarity of the battery are facing in the right directions. Then replace the battery cover.

Step 2 Insert the AC/DC adaptor to any 230 AC household outlet. Then insert the DC jack to the back case of your unit.





Your clock is ready to work for you.

Note: *The battery is for back-up only and just helps to save your settings in cases of missing power. There is no display in back-up mode.*

TO SET TIME

1. Press and hold **SET** for 2 seconds, hour digits flash. Press  /  to set hours.
2. Then press **SET** once again, the minute digits flash. Press  /  button to set minutes.
3. Then press **SET** once again, display shows **24 Hr** and flash. Press  /  button to set 12Hr /24Hr
4. Then press **SET** once again, display shows **:05** and flash. Press  /  button to set snooze duration from 5 minutes to 60 minutes.
5. Press **SET** to return to normal mode or it will return to normal mode in around **10 seconds** if no further press of any other buttons.

TO SET ALARM (Default alarm setting is 6:00 AM)

1. Press and hold **AL**, the hour digits flash with "AL" icon flashing. Press  /  to set your desired alarm hours.
2. Press **AL** once again, the minute digits flash. Press  /  to set your desired alarm minutes.
3. Press **AL** once to store your alarm setting and return to normal time display, or the clock will return to normal mode in around **10 seconds** if no further press of any other buttons.

TO TURN ON OR OFF YOUR ALARM

Single press **AL** one at a time to turn on or off the alarm. When the alarm function is turned on, the **AL** icon appears on top of the time digits.

TO USE SNOOZE ALARM

 
When time reaches your set alarm time, your clock will give a beep sound to wake you up. The **AL** icon will flash.

1. Press **SNOOZE** once to stop the alarm temporarily, **AL** icon keeps flashing. The alarm will beep again in 5 minutes or after your set snooze duration.
2. To stop the daily alarm, press **AL** when alarm is beeping. The alarm will stop and **AL** icon becomes static; alarm will beep again same time next day.

Alarm Duration: 1 hour

TO DISPLAY INDOOR TEMPERATURE

Simply press **SNOOZE** once, the time display will change to temperature display. Press **SNOOZE** once to return to time display.

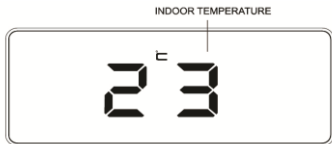

Press and hold **SNOOZE** for 2 seconds, your clock gives a short beep and will display time for 10 seconds and then display temperature for 5 seconds alternately. Press and hold **SNOOZE** will cancel this and return to normal time display mode.

Mode 1: Time display

Mode 2: Temperature display

Mode 3: Press and hold **SNOOZE**: 10 seconds time display ,5 seconds temperature display

TO USE THE DIMMER FUNCTION

Press ▲ / **DIMMER** once to adjust the High / Low brightness of the display.

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electrostatic discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock will be reset to default settings and you need to set it again.

CARE OF YOUR LED ALARM CLOCK

1. Do not expose the unit to extreme temperature, water or direct sunlight
2. Avoid contact with any corrosive materials
3. Do not subject the unit to excessive force, dust or humidity
4. Do not open the inner back case or tamper with any components of this unit
5. Do not plug in any other AC/DC adaptor with incorrect specifications or voltage

SPECIFICATIONS

Operation Temperature: 0°C to +45°C

Indoor Temperature Display Range

- 0°C to +45°C

Temperature Resolution

1°C

Alarm Duration

1 hour

Snooze Duration

5 minutes

AC/DC adaptor voltage

5,5 V