


WT 495 - LED Quartz alarm clock

Instructions manual

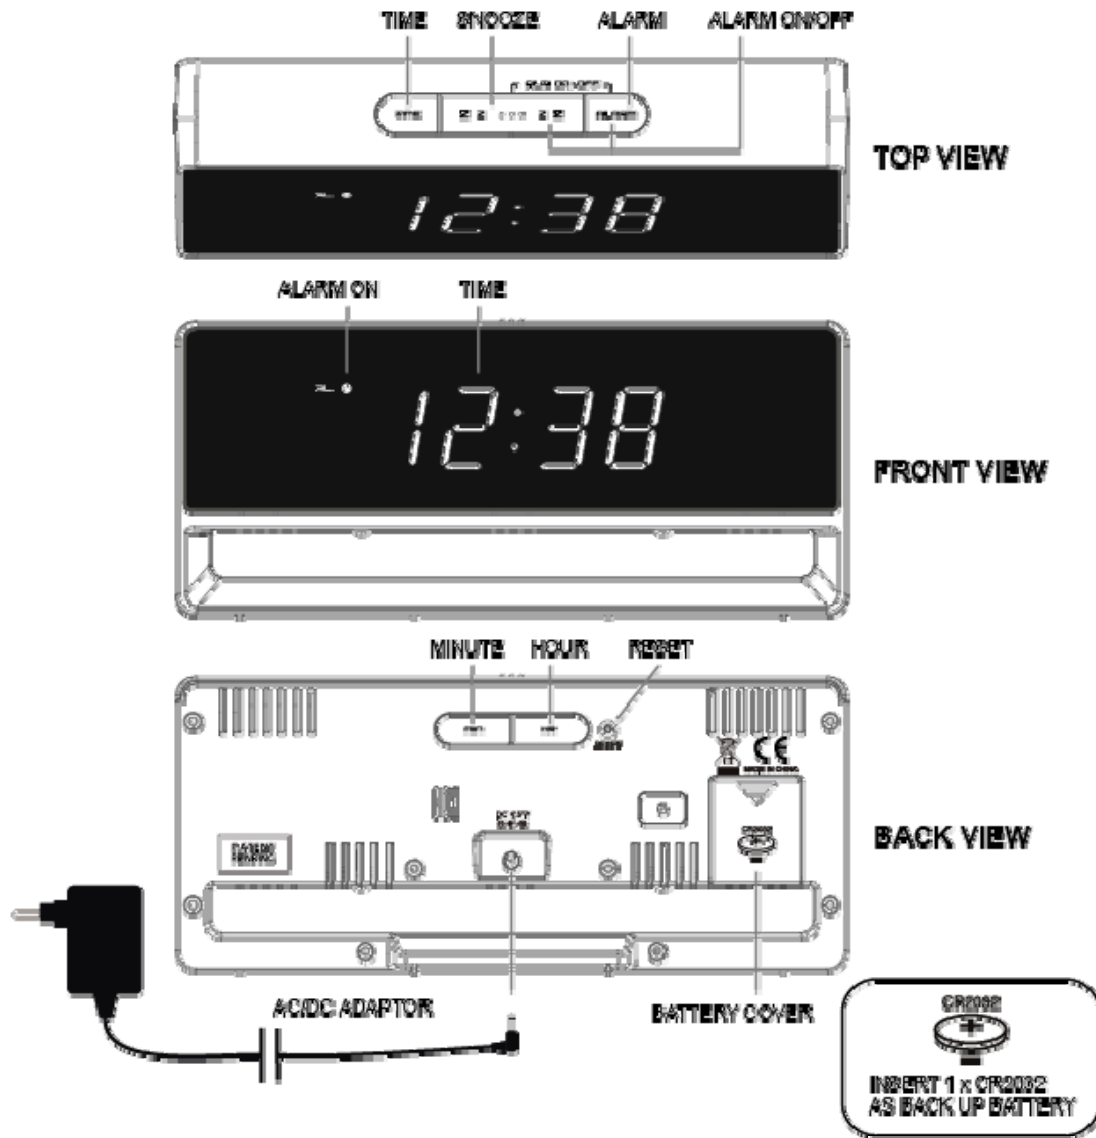

INSTALLATION

Plug in the AC/DC adaptor to any AC household outlet. Then plug in the DC jack to the back of your unit.

Peel off the protective label on the front of your LED clock, the clock will display 0:00 and it is ready to work for you.

BACK-UP BATTERY

1. Slide open the battery cover at the back of your clock.
2. Insert 1 x CR2032 lithium battery into the battery compartment with the + ve polarity facing up.
3. Replace the battery cover.

When AC power is off, the batteries will back the clock to keep track of time and the alarm time. The LED display is off when only the back-up battery is being used.

TO SET TIME AND ALARM TIME

1. To set time, press and hold TIME, then press HR to set the hours. Then press and hold TIME and press MIN at the same time to set the minutes.
2. To set alarm time, press and hold ALARM, then press HR to set the hours. Then press and hold ALARM and press MIN at the same time to set the minutes

TO TURN ON / OFF ALARM

Press Zz ●●● zZ and ALARM together once to turn on the daily alarm, the AL LED will appear on upper left of time display.

Press Zz ●●● zZ and ALARM together once to turn off the daily alarm, the AL LED will disappear on upper left of time display.

TO USE SNOOZE ALARM


When time reaches your set alarm time, your clock will give a beep sound to wake you up. The AL LED will flash.

Press the Zz ●●● zZ once to stop the alarm temporarily, the AL LED keeps flashing. The alarm will beep again in 9 minutes.

To stop the alarm, press and hold the ALARM key until AL LED becomes static. The alarm beep will stop will beep again at the same time next day.

Alarm Duration: 5 minutes

HI-LO DIMMER SENSOR

Press \approx $\bullet \bullet \bullet$  once to adjust the brightness (High – Low) of the LED-display and the mood light to a comfort level.

TROUBLE SHOOTING

In case your clock shows irrelevant information or digits, it maybe affected by electrostatic discharge or interferences from other devices, unplug shortly the DC jack and remove the backup battery to reset the clock. After you re-plug the DC jack and insert the battery again the clock settings will show the default settings and you need to set it again.

PRECAUTIONS

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

BATTERIES SAFETY WARNINGS

- Please read all instructions carefully before use.
- Use only alkaline batteries, not rechargeable batteries.
- Install batteries correctly by matching the polarities (+/-).
- Always replace a complete set of batteries.
- Never mix used and new batteries.
- Remove exhausted batteries immediately.
- Remove batteries when not in use.
- Do not recharge and do not dispose of batteries in fire as the batteries may explode.

- Ensure batteries are stored away from metal objects as contact may cause a short circuit.
- Avoid exposing batteries to extreme temperature or humidity or direct sunlight.
- Keep all batteries out of reach from children. They are a choking hazard.

Consideration of duty according to the battery law



Old batteries do not belong to domestic waste because they could cause damages of health and environment.

You can return used batteries free of charge to your dealer and collection points. As end-user you are committed by law to bring back needed batteries to distributors and other collecting points!