 
 


**INSTRUCTION MANUAL OF WS 6715  
DIGITAL THERMO-HYGROMETER AND WEATHER FORECAST CLOCK**


**FRONT VIEW**

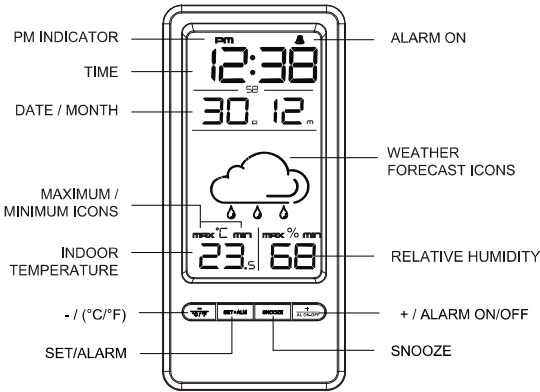

 **BACK VIEW**

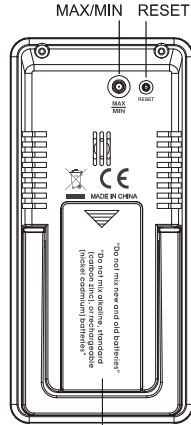

**SIDE VIEW**

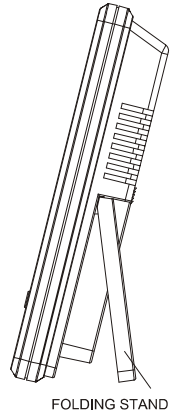

INSERT 2 x AAA BATTERIES

ENGLISH	Other Language
<b>Front view</b>	
PM INDICATOR	
ALARM ON	
TIME	
DATE / MONTH	
WEATHER FORECAST	
MAXIMUM / MINIMUM ICONS	
INDOOR TEMPERATURE	
RELATIVE HUMIDITY	
- / (°C/°F)	
SET/ALM	
SNOOZE	
+/AL ON/OFF	
<b>Back view</b>	
MAX/MIN	
RESET	
INSERT 2 x AAA BATTERIES	
<b>Side view</b>	
FOLDING STAND	

### QUICK START

1. Slide open the battery cover at the back of your clock.
2. Insert 2 x AAA batteries (batteries are not included) into the battery compartment by observing the correct + / - polarity signs inside the battery compartment.
3. Replace the battery cover. In few seconds the LCD shows the default time, calendar and the current indoor temperature and relative humidity.


### TO SET CALENDAR, 12/24 TIME AND TIME

1. Press and hold SET / ALM SET for 2 seconds, time digits change to year "2008 YR" and flash. Press + / - to set year.
2. Then press SET / ALM SET once again, month digits flash. Press +/- button to set month.
3. Then press SET / ALM SET once again, date digits flash. Press +/- button to set date.
4. Press SET / ALM SET once again, time digits change "24 Hr" and press +/- to select "12 Hr" time format or "24 Hr" time format. When "12 Hr" is selected, AM / PM icon will be displayed.




### TO SET ALARM TIME

1. Press SET / ALM SET once, time digits change to alarm time digits "AM 7:00 AL". Then press and hold SET / ALM SET for 2 seconds, the hour digits flash. Press +/- to set your desired hours of alarm time.
2. Press SET / ALM SET again, alarm minute digits flash. Press +/- to set alarm minutes.
3. Press SET / ALM SET again, time digits change to "05" and flash. Press +/- to set the snooze duration from 1 to 20 minutes.
4. Press SET / ALM SET to return to normal mode or it will return to normal mode in around 8 seconds if no further press of any other buttons.

### TO TURN ON OR OFF YOUR ALARM

Press SET / ALM SET once to display the alarm time. When alarm time is displayed, press + to turn on / off the daily alarm. When the alarm function is turned on, the  icon appears in the right corner of the display.

### TO USE SNOOZE ALARM

1. When time reaches your set alarm time, your clock will give beep sound to wake you up. The  icon will flash.
2. Press SNOOZE once to stop the alarm temporarily, the  icon keeps flashing. The alarm will beep again in 5 minutes.
3. To stop the alarm, press + once, the alarm beep will stop and the  icon become static, alarm will beep again same time next day.

Alarm Duration: 2 minutes

### TO DISPLAY TEMPERATURE IN DEGREE C OR F

Simply press - (°C/°F) to display temperature in degree C or degree F.

### To Read the Maximum-Minimum Temperature and Relative Humidity Records




Press MAX/MIN at the back once to view the maximum or minimum indoor temperature and relative humidity.

 
When the maximum indoor temperature and relative humidity are displayed, press and hold the MAX will clear the maximums and the unit will start to record and display fresh data again.

When the minimum indoor temperature and relative humidity are displayed, press and hold the MIN will clear the minimums and the unit will start to record and display fresh data again.

### TO USE THE WEATHER FORECASTER

There are four types of weather display in your weather station:

	SUNNY
	SUNNY AND CLOUDY
	CLOUDY

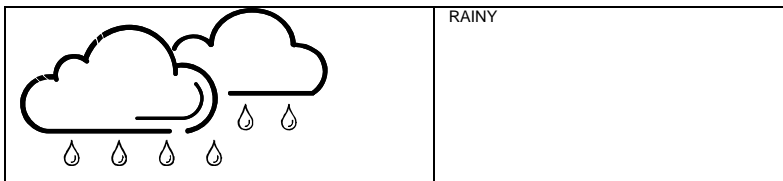

**Remarks:** for better use of your weather station, place it at a location with open air circulation e.g. close by an open window. Placing it at air-conditioned environment will affect its accuracy.

After your weather station is powered up, it will take around 24 hours to get stable. The weather icons on the display give a reference to the next 6-12 hours weather conditions. It may not match with the current weather condition outside.

#### **TROUBLE SHOOTING**

In case your thermo-hygrometer shows irrelevant information or digits, it maybe affected by electrostatic discharge or interferences from other devices. Press the RESET button on the back of your unit. Your unit will be reset and starts to measure fresh temperature and relative humidity data again.

#### **CARE OF YOUR WEATHER STATION CLOCK**

1. Do not expose the unit to extreme temperature, water or direct sunlight.
2. Avoid contact with any corrosive materials.
3. Do not subject the unit to excessive force, dust or humidity.
4. Do not open the inner back case or tamper with any components of this unit.

#### **SPECIFICATIONS**

Indoor Temperature Range	0°C to 45°C (+32F to +122F)
Relative Humidity Range	20% - 95%
Out of Range Display	
Temperature:	out f range HH.H / LL.L
Humidity:	below 20% keeps showing 20%, over 95% keeps showing 95%
Temperature Resolution	0.1°C
RH% Resolution	1%

VERSION 2.0  
2010.01.08