




TM3070-RF

Please read this manual carefully in order to help you put the device into operation. Keep the manual handy so you can refer to it at a later date!

Operation and display

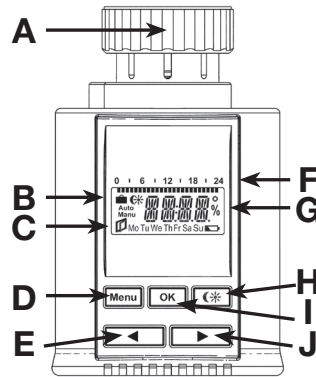

- A Thermal ring
- B Holiday function (☐), set-back/comfort temperature (☼), manual operation (Manu), automatic operation (Auto)
- C "Window open" symbol (☐), day of the week, "battery empty" symbol (⚡)
- D Menu button: Press and hold down the button for more than 3 seconds to open the configuration menu
- E Colder/arrow button: Settings / temperature adjustments
- F Switching periods set within weekly program
- G Current temperature setting, time and date indicator, menu items, functions
- H ☼-button: For switching between set-back and comfort temperatures
- I OK button: For confirming/saving, teaching in
- J Warmer/arrow button: Settings/temperature adjustments


2

General function

This energy-saving controller for radiators can be used to control room temperature on the basis of time. The actuator moves a valve, thereby allowing the amount of heat flowing to the heating appliance to be controlled. The controller is compatible with all standard heating appliance valves. A wireless receiver allows the device to receive commands from taught-in system components. **Installation can be achieved in 3 easy steps.**

Step 1: Inserting (replacing) the batteries

- Remove the battery compartment cover.
- Insert 2 new LR6 batteries (Mignon/AA) into the battery compartment, ensuring they are the right way round.
- Reattach the battery compartment cover and click into place.

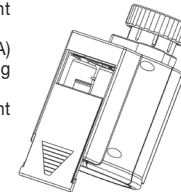

New alkaline batteries have a life of approximately two years. A battery symbol (⚡) will indicate when the batteries need to be replaced. After removing the old batteries, please wait approximately 1 minute before inserting the new ones. This device does not support operation with rechargeable batteries.

- ⚠ Never recharge standard batteries. Doing so will present a risk of explosion.
- ⚠ Do not throw the batteries into a fire. Do not short-circuit batteries.


Used batteries should not be disposed of with regular domestic waste. Instead, they should be taken to your local battery disposal point.

3

Step 2: Setting the date and time of day

The firmware version number will be displayed briefly once you have inserted/replaced the batteries and then you will be automatically prompted to set the date and time of day.

- Use the arrow buttons (B/D) to set the year (A).
- Confirm with OK (C).
- Use the arrow buttons (B/D) to set the month (A).
- Confirm with OK (C).
- Use the arrow buttons (B/D) to set the day (A).
- Confirm with OK (C).
- Use the arrow buttons (B/D) to set the hour (A).
- Confirm with OK (C).
- Use the arrow buttons (B/D) to set the minute (A).
- Confirm with OK (C).

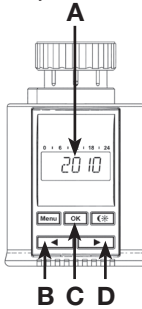


- The motor will start moving back the control pin while the entries are still being made.
- If "INS" is displayed with a rotating "⏮" symbol, this indicates that the motor is still moving back. Once the device is ready for the actuator to be installed on the valve, just "INS" will appear on the display.
 - **The weekly program and other settings can be customised prior to installation.** To do this, press the menu button when "INS" is shown on the display. For further details, please see "4. Configuration menu".
 - Once programming is complete, "INS" will reappear on the display and installation (Step 3) can commence.
 - When "INS" is visible on the display, you can activate the teach-in function prior to installation by pressing the ☼ button briefly.

4

Step 3: Installing the energy-saving controller


The actuator can be installed on all standard heating valves. There is no need to drain away water or fiddle around with the heating system before doing this. First, you need to remove the old thermostat dial:

- Turn the thermostat dial anti-clockwise as far as it will go (A).
- Release the thermal ring of the thermostat (B).
- Remove the thermostat from the valve (C).

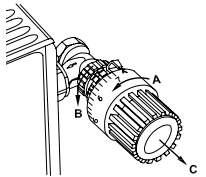

An adapter will need to be used in the case of certain valves. Adapters for Danfoss valves (RA, RAV, RAVL) are included in the scope of delivery. For details, please refer to the adapter overview (see 21).

- The adapter must be placed on the valve and turned until it is securely seated.
- In the case of the RAV adapter, the extension supplied must be attached to the valve tappet.
- The RA and RAV adapters must, in addition, be secured by means of the bolt and nut supplied.

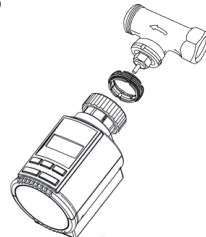

The energy-saving controller can only be installed if "INS" is showing on the display. Following installation, the actuator will perform an adjustment run so that it can adapt to the valve. During this process, "ADA" will be displayed.

- Place the actuator on the valve.
- Tighten the union nut.
- "INS" will appear on the display, press the OK button.

5

 
 
- The actuator will perform an adjustment run ("ADA" will appear on the display, operation not possible).
- After that, the actuator will be ready for operation (Auto mode).

- If the adjustment run was initiated prior to installation, or if an error message will be displayed (F1, F2, F3); press OK to move the motor back to the "INS" position.

1. Setting the weekly program

The weekly program allows two separate heating phases (four switching times) to be set for each day of the week. The programmed settings only apply to the selected days. Outside these times the actuator reduces the temperature to the specified set-back temperature (see 10).

- Press and hold down the Menu button for longer than 3 seconds.
- "PRO" appears on the display.
- Confirm by pressing the OK button.
- "DAY" appears on the display. You can use the arrow buttons to select a single day of the week, all weekdays, the weekend, or the entire week (weekdays has been selected in the example).
- Confirm your selection by pressing the OK button.
- The first heating phase switching time is displayed (6:00); you can change this time with the arrow buttons. Heating intervals are also shown by means of bars.
- Confirm by pressing the OK button.
- You then need to set the temperature that the room should be at from 6:00 onwards (21.0°C in the example).
- Confirm your selection by pressing the OK button.



6


- The end time for the first heating interval is displayed (9:00 in the example); you can change this time with the arrow buttons.
- Confirm by pressing the OK button.
- Repeat this procedure for the second heating interval. In auto mode (weekly program), the temperature can be changed at any time using the arrow buttons. The modified temperature will then remain the same until the next point at which the program changes.



2. Weekly program: Examples

The energy-saving controller allows you to store up to 2 heating periods (4 switching times) with individual temperature settings for each day of the week. The factory setting consists of two heating phases (from 6:00 until 9:00 and from 17:00 until 23:00 respectively) for every single day of the week:


| | |
|---------------------|--------|
| From 00:00 to 06:00 | 17.0°C |
| From 06:00 to 09:00 | 21.0°C |
| From 09:00 to 17:00 | 17.0°C |
| From 17:00 to 23:00 | 21.0°C |
| From 23:00 to 23:59 | 17.0°C |

 

- The display shows bars for every heating interval. In this example, no bars are shown for the interval from 0:00 to 6:00. Bars are only shown on the display for the intervals from 6:00 to 9:00 and from 17:00 to 23:00.


If a room also needs to be heated at around noon, the corresponding program might look like this:

| | |
|---------------------|--------|
| Monday to Sunday | |
| From 00:00 to 06:00 | 17.0°C |
| From 06:00 to 14:00 | 22.0°C |
| From 14:00 to 17:30 | 17.0°C |
| From 17:30 to 23:30 | 21.0°C |
| From 23:30 to 23:59 | 17.0°C |

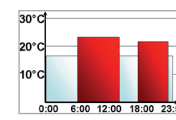

If you have a home office and only want it to be heated during the day on working days, you can program the following times:

| | |
|---------------------|--------|
| Monday to Friday | |
| From 00:00 to 08:30 | 17.0°C |
| From 08:30 to 17:00 | 21.0°C |
| From 17:00 to 23:59 | 17.0°C |
| Saturday and Sunday | |
| From 00:00 to 23:59 | 17.0°C |

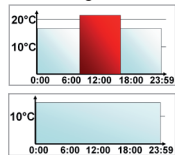

3. Operating modes

To switch between the 3 operating modes described below, press the menu button briefly (these operating modes can only be selected following installation/Step 3):

- **Holiday function (☐):** Set a temperature that is to be maintained until a fixed point in time.
- **Manu:** Manual operation – The temperature is set manually using the arrow buttons.
- **Auto:** Weekly program – The temperature is controlled automatically in accordance with the stored weekly program.

4. Configuration menu

The configuration menu can be used to modify settings. To access this menu, press and hold down the menu button (for more than 3 seconds).

- PRO: For setting the weekly program (see Section "1 Setting the weekly program")
- DAT: For modifying the time of day and date
- POS: For querying the actuator's current position
- DST: Automatic switchover at the start or end of daylight saving time can be deactivated.
- AER: For setting the "window open" temperature and time (the temperature is automatically reduced in the event of ventilation)
- TOF: For setting the offset temperature

7

8

- RES: For restoring the factory settings
 - UNL: For teaching out all taught-in wireless components
- Use the arrow buttons to select menu items and the OK button to confirm your choice. Press the menu button again to return to the previous level. After 65 seconds without anything happening, the menu will close automatically.

5. Display content during normal operation

During normal operation, the following are displayed: heating periods, operating mode, temperature setting and day of the week.



The bars indicating the weekly program's heating periods for the current day. For an example, please refer to "2. Weekly program: Examples".

6. Teaching in wireless components

The actuator supports the teaching in of up to 4 system components (e.g. window contact), plus 1 wall thermostat.

- Press the OK button for more than 3 seconds.
- The remaining teach-in time will be displayed (30 seconds).
- The device being taught-in now needs to send a wireless signal.
- After successful teach-in, the teach-in mode ends automatically.

Once this has been done, the actuator will respond to wireless commands from taught-in devices.

7. Teaching out wireless components

Components that have been taught in on the actuator can be taught out again using the "UNL" (Unlearn) function. All wireless components are taught out at once with this function.

- Press and hold down the menu button for more than 3 seconds.
- Use the arrow buttons to select the "UNL" menu item.

9

- Confirm with OK.
- "CFM" will appear on the display; press OK to confirm.

8. Operation with a wall thermostat

If the actuator is going to be operated in conjunction with a wall thermostat, this thermostat will need to be taught in (see 6). Once it has been taught in, "ECF" will appear on the display. No further settings can then be made on the actuator. Only teach-in mode can still be activated by pressing and holding down the OK button for more than 3 seconds.

If no wireless signal is received from the wall thermostat for a period of 60 minutes, the actuator will exit ECF mode. It will then assume control of the temperature, which it will continue to regulate in accordance with the weekly program until the next wireless signal is received.

To "teach out" a wall thermostat, you must reinsert the batteries in the actuator (and wait for approx. 1 minute). Once you have entered the date and time of day, you can use the menu button (before the adjustment run is initiated) to perform the "teach-out" process as described in section 7.

9. Setting the holiday function

If you want a fixed temperature to be maintained for a set period of time while you are on holiday or during a party, you can make use of the Holiday function.

- Press and release the menu button repeatedly until the suitcase symbol (🧳) appears on the display.
- Use the arrow buttons to set the end of the time period during which the temperature is to be maintained.
- Press the OK button to confirm.
- Then use the arrow buttons to set the date.
- Press the OK button to confirm.
- Use the arrow buttons to set the temperature; press OK to confirm. The display will flash to confirm your settings.

The set temperature will remain in force until the specified time. After that, the actuator will adopt Auto mode. Wireless commands from the window contact will continue to be executed.

10

10. Comfort and set-back temperatures

The comfort/set-back temperature button (☼) provides an easy and convenient way of switching between these two temperatures. The factory settings are 21.0°C and 17.0°C respectively. To adapt them, proceed as follows:

- Press and hold down the comfort/set-back temperature button (☼) for more than 3 seconds.
- The sun symbol (☼) will appear on the display along with the current comfort temperature.
- Use the arrow buttons to modify the temperature; press OK to confirm.
- The moon symbol (☾) will appear together with the set-back temperature.
- Use the arrow buttons to modify the temperature; press OK to confirm.

The temperature can even be modified in Auto mode at any time by using this button. The new setting will be retained until the program's next switching time.

11. Child-proof lock/Operating inhibit

Operation can be inhibited.

- To activate/deactivate the operating inhibit, briefly press the Menu and ☼ buttons at the same time.
- Once the function is active, "LOC" will appear on the display.
- To deactivate the function, press both buttons again.

12. Setting the heating break

If the heating is being switched off for the summer, you can save battery power. This involves opening the valve up fully. Limescale protection measures remain in place. Wireless commands from the window contact will no longer be executed.

To activate this, proceed as follows:

- In manual mode (Manu), press and hold the right arrow button (increase temperature) until "ON" appears on the display.
- To end, exit manual mode (Manu) or press the left arrow button (decrease temperature).

11

13. Setting frost protection mode

If you do not want the room to be heated, the valve can be closed. It will only be opened again if there is a risk of freezing due to frost. Limescale protection measures remain in place. Wireless commands from the window contact will no longer be executed.

To activate this, proceed as follows:

- In manual mode (Manu), press and hold the left arrow button (decrease temperature) until "OFF" appears on the display.
- To end, exit manual mode (Manu) or press the right arrow button (increase temperature).

14. "Window open" function

If the room is being ventilated, the actuator controls the temperature to save on heating costs. While this function is active, the "window open" symbol (🪟) appears on the display.

Without window contact: The actuator will automatically detect a significant drop in temperature due to ventilation. You can set your own "window open" temperature and time.

With taught-in window contact: The temperature will only be reduced during the time that the window is left open. You can set your own "window open" temperature.

- Press and hold down the menu button for more than 3 seconds.
- Use the arrow buttons to select the "AER" menu item.
- Confirm with OK.
- Use the arrow buttons to set the temperature/time. Then press OK to confirm.
- Without a taught-in window contact, this function can be deactivated by selecting a time of "0".

12

15. Setting the offset temperature

The temperature is measured at the heating appliance itself, with the result that other parts of the room may be warmer or colder than this. To allow for this, you can set a temperature offset of ±3.5°C. If, for example, a temperature of 18°C is measured somewhere within the room instead of the 20°C set, it means that an offset of -2.0°C needs to be configured.

- Press the menu button for more than 3 seconds.
- Use the arrow buttons to select the "TOF" menu item.
- Confirm with OK.
- Use the arrow buttons to modify the temperature.
- Press the OK button to confirm.

16. Restoring the factory settings

You can reset the actuator to its initial state manually. This will clear all the settings that have been made manually.

- Press the menu button for more than 3 seconds.
- Use the arrow buttons to select the "RES" menu item.
- Confirm with OK.
- "CFM" will appear on the display; press OK to confirm.

17. Intended use

The energy-saving controller has been designed for the purpose of controlling a standard heating appliance valve. The device may only be operated indoors and must be protected from the effects of damp and dust, as well as solar radiation and sources of radiant heat.

Using the device for a purpose or in a manner other than that described in this operating manual constitutes a breach of the "intended use" and shall invalidate the warranty and any liability claims. The same shall apply in the event of any conversion or modification work. The devices are intended exclusively for domestic use.

13

18. Troubleshooting and maintenance

| Error code on display | Problem | Remedy |
|-----------------------|---|---|
| Battery symbol (🔋) | Battery power too low | Replace batteries |
| F1 | Valve actuator sluggish | Check installation, inspect heating valve |
| F2 | Adjusting range too large | Check actuator fastening |
| F3 | Adjusting range too small | Check heating valve |
| F4 | 1 wall thermostat already taught in | Teach out devices |
| F5 | 4 wireless components already taught in | |

i At 12:00 every Saturday, the actuator performs a weekly descaling function to prevent valve calcification. "CAL" will appear on the display.

19. Instructions for disposal

Do not dispose of the device with regular domestic waste.

Electronic equipment must be disposed of at local collection points for waste electronic equipment in compliance with local directives governing waste electrical and electronic equipment.



CE The CE sign is a free trade sign addressed exclusively to the authorities and does not warrant any properties.

14

20. Safety instructions

The devices concerned are not intended for children and must not be used as toys. Do not leave packaging material lying around, as children might be tempted to play with it, which is extremely dangerous. Do not open the device: it does not contain any components that need to be serviced by the user. In the event of an error, please return the device to our service department.

21. Adapter overview

| Manufacturer | Figure | Adapter |
|--|--------|-----------------------------|
| Heimeier, MNG, Junkers, Landis&Gyr "Duodyr", Honeywell- Braukmann, Oventrop, Schlösser, Simplex, Valf Sanayii, Mertik Maxitrol, Watts, Wingenroth (Wiroflex), R.B.M., Tiemme, Jaga | | No adapter required |
| Danfoss RA | | Included in scope of supply |
| Danfoss RAV | | Included in scope of supply |
| Danfoss RAVL | | Included in scope of supply |

15

22. Information about radio operation

Radio transmission is performed on a non-exclusive transmission path, which means that there is a possibility of interference occurring. Switching operations, electric motors or faulty electric devices are some of the reasons why interference may occur. The range of transmission within buildings can deviate greatly from open air distances. Besides the transmitting power and the reception characteristics of the receiver, environmental influences such as humidity and local structures also play an important role.

TechnoTrade Import-Export GmbH hereby declares that this device conforms with the essential requirements and other relevant regulations of Directive 1999/5/EC.

The full declaration of conformity is provided at www.technoline-berlin.de/Konformitaetserklaerung.

23. Technical properties

| | |
|---------------------------|------------------------------|
| Supply voltage: | 3 V |
| Max. current consumption: | 100 mA |
| Batteries: | 2x LR6 batteries (Mignon/AA) |
| Battery life: | Approx. 2 years |
| Display: | LC display |
| Receiver frequency: | 868.3 MHz |
| Ambient temperature: | +5 to +55°C |
| Max. surface temperature: | +90°C (of the radiator) |
| Linear travel: | 4.2 mm |
| Spring force: | max. 80 N |
| Housing dimensions: | 63 x 66 x 91 mm (W x H x D) |
| Connection: | M30 x 1.5 |

We reserve the right to make any technical changes that constitute an improvement to the device.

Issue 1 English 10/2009
Documentation © 2009 TechnoTrade Import-Export GmbH, Wildau.
All rights reserved.
CC-RT-RX-CyH-W-R3, V1.1 910-03

16