

**WQ 140**  
**Solar Powered Alarm Desktop Clock**  
Instruction Manual

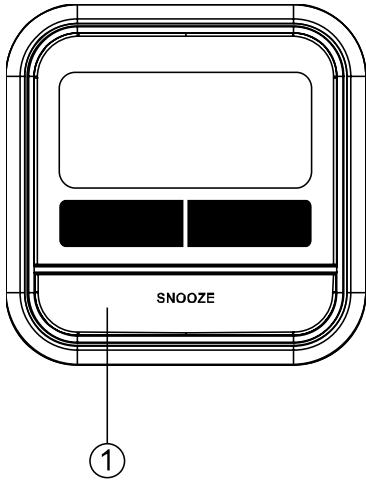


Fig. 1 Front view

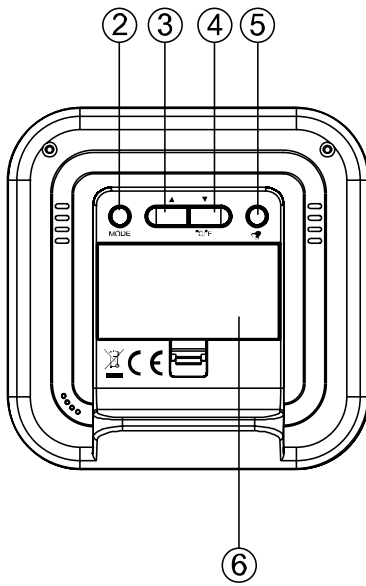



Fig. 2 Back view

## Introduction

This solar powered desktop clock comes with calendar, day, and temperature display. It is solar powered with optional backup DC batteries. The light condition in most bright indoor spaces is sufficient to recharge the built-in rechargeable batteries. Exposing the unit to direct sunlight is not suggested and it is not necessary.

- (1) "SNOOZE" button
- (2) "MODE" button
- (3) "▲" button
- (4) "▼/C/F" button
- (5)  button
- (6) Battery compartment

## Getting started:

Toggle the "On/Off" switch located under the battery compartment (6) to turn on the clock, Optional batteries installation

1. Open battery compartment (6) on the back of the unit. (see figure 2)
2. Install / replace with 2x "AAA" size batteries in the compartment. It is recommended that only alkaline batteries are used.
3. Replace the battery compartment (6) on the back of the unit.

## Batteries safety warnings:

1. Please read all instructions carefully before use.
2. Install batteries correctly by matching the polarities (+/-).
3. Always replace a complete set of batteries.
4. Never mix used and new batteries.
5. Remove exhausted batteries immediately.
6. Remove batteries when not in use.
7. Do not recharge and do not dispose of batteries in fire as the batteries may explode.
8. Ensure batteries are stored away from metal objects as contact may cause a short circuit.
9. Avoid exposing batteries to temperature or humidity extremes or direct sunlight.
10. Keep all batteries out of reach from children. They are a choking hazard.
11. Please retain packaging for future reference.

## To set time:

Hold down the "MODE" button (2) for approximately 3 seconds until the display is flashing.

Touch "▲" button (3) or "▼/C/F" button (4) to toggle between the 24-hour clock and

AM/PM setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the hour setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the minute setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the year setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the month setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the day setting.

Touch “Mode” button (2) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the calendar language setting.


*ENG* for English; *GER* for German; *SPA* for Spanish; *DUT* for Dutch; *FRA* for French;

*ITA* for Italian;

Touch “Mode” button (2) again to confirm settings.

Display will no longer flash.

### **To set alarm time:**

Hold down the “” button (5) for approximately 3 seconds until the alarm display is flashing. “AL” will be displayed on the screen.

Touch “▲” button (3) or “▼/C/F” button (4) to change the hour setting.



Touch “” button (5) again.

Touch “▲” button (3) or “▼/C/F” button (4) to change the minute setting.

Touch “” button (5) again to confirm settings.

### **To activate the alarm:**

Set desired alarm time as per instructions above.

Touch “” button (5) to activate alarm. “” will be displayed on the screen.

Clock will beep for 1 minute when the preset alarm time is reached. When the alarm is sounded, touch “Snooze” button (1) to activate the snooze function. The alarm will sound again in 6 minutes.

### **Setting the Thermometer**

Touch “▼/C/F” button (4) to toggle between Fahrenheit and Celsius.

### **Warnings**

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not immerse the unit in water.
- The battery in this product is not replaceable. Do not replace.
- Avoid exposing unit to direct sunlight.
- The rechargeable battery has a limited shelf life. Do not try to replace the rechargeable battery.
- Dispose the complete unit when battery is no longer charging or when the unit is no longer displaying the temperature and / or humidity.
- Do not remove any screws.
- Do not dispose this unit in a fire. IT MAY EXPLODE.
- Keep unit away from small children. The unit or parts of the unit might be a choking hazard.

- Never attempt to recharge the batteries in any other methods.
- Dispose the unit legally.
- Recycle when possible.
- Solar cells will charge built-in rechargeable batteries at a minimum average of 3,000 lux.

### **Specifications**

1. Temperature Range : -9.9°C to 70 °C ( 14.2°F to 158°F)
2. Temperature Tolerance : +/- 1°C
3. Calendar range: year 2000 to year 2099