## WS 7043

#### **FEATURES:**

Measuring indoor temperature range:  $0 \sim 50 \,^{\circ}\text{C}$  (  $32^{\circ}\text{F} \sim 122^{\circ}\text{F}$ ) Measuring outdoor temperature range:  $-50 \sim 70 \,^{\circ}\text{C}$  (  $-32^{\circ}\text{F} \sim 183^{\circ}\text{F}$ )

Measuring humidity range: 20% ~ 99%

Resolution: 1°C

Display: max/min temperature and humidity records

Calendar: 2000 ~ 2099 year

BATTERY: 2 × AAA, Micro

SETTING THE	: TIMF
SETTING THE	/ 1 11V1L

Press and hold MODE for 2 seconds to enter the time setting mode.

The year digits are blinking and can be set by pressing UP or DOWN for setting year.

# Press MODE again:

The month digits are blinking and can be set by pressing UP or DOWN for setting month.

# Press MODE again:

The day digits are blinking and can be set by pressing UP or DOWN for setting day.

#### Press MODE again:

The hour digits are blinking and can be set by pressing UP or DOWN for setting hour.

# Press MODE again:

The minute digits are blinking and can be set by pressing UP or DOWN for setting minute.

Press MODE to complete the time setting

-----SETTING THE ALARM-----

Press MODE to view the alarm time

Press MODE hold for 3 seconds to enter the alarm setting mode.

The hour digits are blinking and can be set by pressing UP or DOWN for setting hour.

## Press MODE again:

The minute digits are blinking and can be set by pressing UP or DOWN for setting minute.

Press MODE to complete the time setting

ALARM ON/OFF
Press MODE to view the alarm time At the alarm time mode
Press UP or DOWN to turn alarm on/off.
MAX / MIN
Press MAX/MIN to view MAX temperature and humidity record.  Press MAX/MIN again to view MIN temperature and humidity record.
12/24 FORMAT HOUR
While in time mode, Press UP to switch 12 or 24 format hour time display.
TEMPERATURE DISPLAY FORMAT
While in time mode, Press DOWN to switch °C/°F display.
SNOOZE
While alarm to press SNZ for snooze mode, alarm will repeat in 5 minutes.