

OPERATION INSTRUCTION WS 9121

A. Mode switchable

Press [MODE] to switch among the status of Time, Alarm and Calendar.

B. Time Mode

- 1). Starting from the normal time display status, press [SET] 2 seconds to enter the setting status of 12/24hr, Hour, Minute. Press [ADJUST] to plus one. Press [MODE] to quit the setting status.
- 2). At normal time display status, press [ADJUST] or [MAX/MIN] key to check the MAX, MIN of temperature and hygrometer, press [ADJUST] for 2 seconds to clear the memory of MAX, MIN temperature and replaced with current value.
- 3). At normal time display status, press [SET] or [C/F] key to change the °C and °F degree display
- 4). At normal time display status, press [MODE] key once to enter the Alarm status as below.

C. Alarm Mode

- 1). Starting from the normal time display status, press [MODE] key once to enter the waiting status of alarm setting, then press [SET] 2 seconds to set the Alarm time of Hour and press [SET] again to set Alarm time of Minute. Press [ADJUST] to plus one. After setting, press [MODE] to quit the Alarm setting status.
- 2). Starting from normal time display, press [MODE] to enter Alarm status, then press [ADJUST] to switch the Alarm, and the beep each hour.
- 3). Press [MODE] key to quit.

D. Calendar Mode

- 1). Starting from normal time display, press [MODE] twice to enter waiting status of Calendar setting, press [SET] key for 2 seconds to enter Year setting, press [ADJUST] to plus one. Press [SET] and [ADJUST] key in turn to adjust Month, Date accordingly.
- 2). Press [MODE] to quit the Calendar Mode and resume the Time display status.

Measuring Temperature Range: -50°C / +70°C (-58°F / +158°F)

Measuring Humidity Range: 20% RH / 99% RH ("LL" for below 20% and "HH" for above 99%)

Operated by 2x AA batteries (not included)