


Instruction manual WT-181

Main Unit Appearance

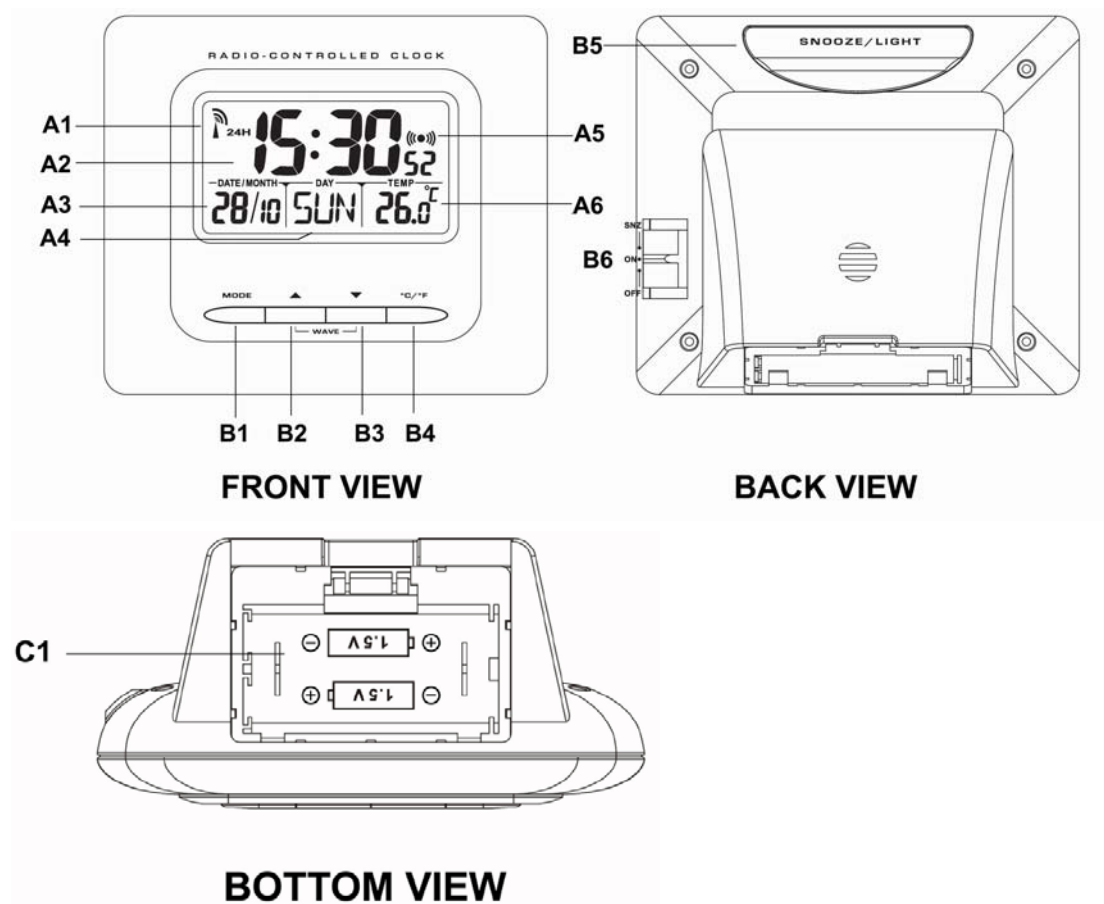

Part A-LCD

A1: Radio signal received icon.

A2: Radio controlled Time.

A3: Month / Date.

A4: Day of Week

A5: Alarm icon

A6: Temperature

Part B-Button

B1: MODE BUTTON

B3: “▼” BUTTON

B5: SNOOZE/LIGHT BUTTON

B6: “ALARM,SNOOZE ON/OFF” Slide key

B2: “▲” BUTTON

B4: “C/F” BUTTON

Part C-Structure






C1: Battery Compartment

Set Up:

- Remove battery compartment door at the back of the unit.

- Insert one AA battery.
- Press "RESET" hole inside the battery door the unit with a pin.

Radio Controlled Time:

- The clock automatically starts scanning the DCF frequency signal after new batteries inserted (“” flashes on the LCD)
- The clock automatically scans the time signal at 3:00a.m. everyday to maintain accurate timing. For failed reception in 4 minutes, scanning stops (“” on LCD disappear) and repeats again at 4:00a.m., 5:00a.m., and 6:00a.m.
- The clock manually scans the time signal by hold ▲”(B2) & ▼”(B3) buttons. For failed reception in 4 minutes, scanning stops (“” on LCD disappear) and repeats again in the next hour. e.g. scanning at 8:20a.m. fail, it will scan again at 9:00a.m.
- Hold ▲”(B2) & ▼”(B3) button for 3 seconds to stop scanning.
 - *  flashes indicate now is receiving DCF signal
 -  Turns on indicate signal received successfully
 - “DST” shown on the LCD if it is in Daylight Saving Time Mode

Manual Time Setting:

- Press “MODE” (B1) button to select time display.
- Hold “MODE” (B1) button for 3 seconds and time flashes.
- Press ▲”(B2) & ▼”(B3) to adjust Time, Year, Month and Date.
- The setting sequence is shown as follow: Hour, Minutes, Second, Year, Month, Day, Language of Weekday, Time Zone.
- Press “MODE” (B1) button to confirm each setting.
- There are 7 languages, English, German, French, Spanish, Italian, Dutch and Denmark, for day-of-week. The languages and their selected abbreviations for each day of the week are shown in the following table.

| Language | Sunday | Monday | Tuesday | Wednesday | Thursday | Friday | Saturday |
|-------------|--------|--------|---------|-----------|----------|--------|----------|
| English, EN | SUN | MON | TUE | WED | THU | FRI | SAT |
| German, GE | SON | MON | DIE | MIT | DON | FRE | SAM |
| French, FR | DIM | LUN | MAR | MER | JEU | VEN | SAM |
| Spanish, ES | DOM | LUN | MAR | MIE | JUE | VIE | SAB |
| Italian, IT | DOM | LUN | MAR | MER | GIO | VEN | SAB |
| Dutch, NE | ZON | MAA | DIN | WOE | DON | VRI | ZAT |
| Denmark, DA | SON | MAN | TIR | ONS | TOR | FRE | LOR |

 
- The Time zone is used for the countries where can receive the DCF time signal but the time zone is different from the German time.
- When the country time is faster than the German time for 1 hr, the zone should be set to +1. Then the clock will automatically set 1 hour faster from the signal time received.
- The Time Setting Mode will automatically exit in 10 seconds without any adjustment.

Daily Alarm Setting :

- Press “MODE”(B1) to select Alarm Time Display
- Hold “MODE”(B1) for 3 seconds and Alarm Time flashes.
- Pressing “▲”(B2) & “▼”(B3) buttons to adjust the alarm time.
- Press “MODE”(B1) to confirm each setting.

Snooze Alarm Function :

- Slide the “ALARM, ANOOZE NO/OFF” (B6) switch to ON to switch on the alarm.



" " appears on the display

- Slide the “ALARM, ANOOZE NO/OFF” (B6) switch to SNOOZE to switch the snooze alarm. "Zz" appears on the display.
- Press SNOOZE/LIGHT (B5) when alarm alerts. The alarm snoozes for 4 minutes, then it alerts again. “Zz” flashes on the LCD during the snooze time.
- Simply press other buttons or slide “ALARM, ANOOZE NO/OFF” (B6) switch to OFF to stop snooze alarm.

Back Light:

- Press SNOOZE/LIGHT (B5), back light states for 3 seconds
- Back light states for 3 seconds when alarm alerts

Notes:

- All function keys do not work when the radio signal is being scanned
- If the unit does not work properly, please take off the batteries. Wait a few seconds for the display to turn off. Insert batteries again. The unit will reset.
- Avoid placing the clock near interference sources/metal frames such as computer monitor or TV sets
- Placing the clock closer to a window/towards the general direction of the Transmitter. The signal is weaker in basement
- Never use the clock in bathroom or any other area with high humidity
- The operating temperature of the clock is 0°C – 50°C
- The clock loses its time information when the battery is removed