


Instruction manual

Programmable Wine Thermometer, WS - 1009

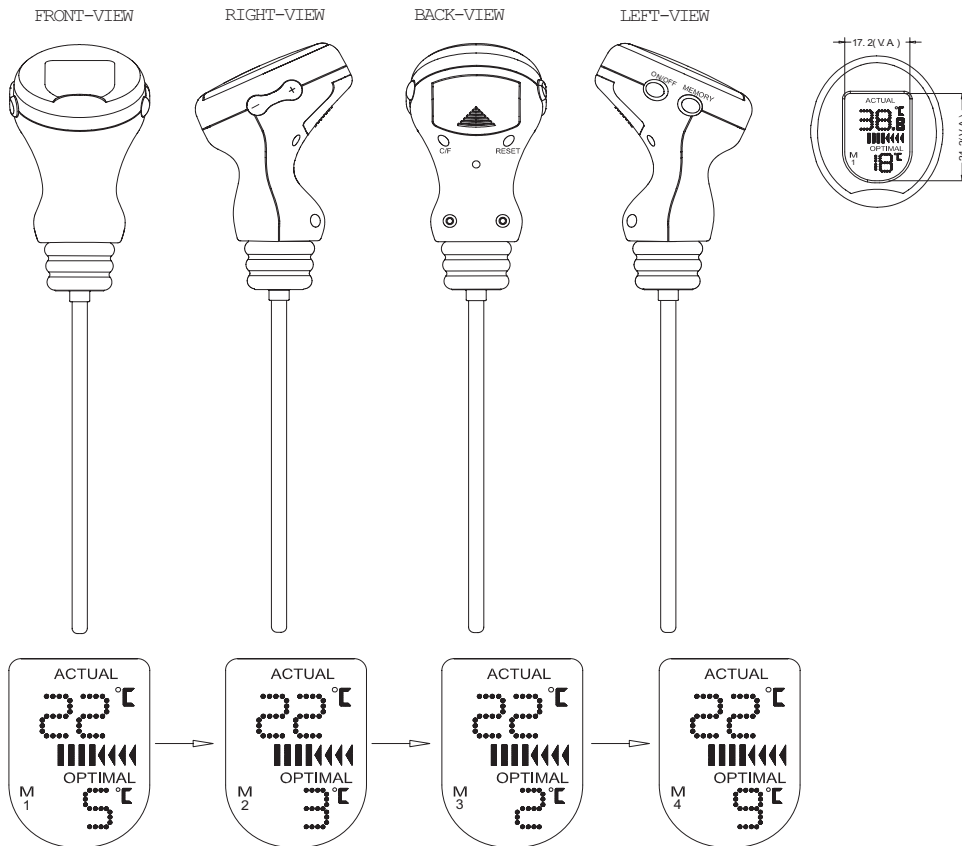

4 memories for user's own selections.

- Open the battery door at the back of the unit.
- Insert one LR44 battery
- Make sure that you close the compartment cover for the battery to avoid them falling out of place.

TO MEASURE THE TEMPERATURE

"MEMORY" FUNCTION

- press "MEMORY" button to select M1-M4 then press "+" or "-" button for 2 seconds to enter user's desired wine thermometer
- press "MEMORY" button to confirm entry or desired preset temperature will be automatically saved in 9 seconds.
- When wine reaches its optimal temperature, the Optimal Temperature Bar blinks (see Fig.1).

When the temperature is higher than its optimal temperature, Too Warm Temperature Bar blinks (see Fig.2).

When the temperature is lower than its optimal temperature, Too Cool Temperature Bar blinks (see Fig.3).

Unit will beep when it reaches the optimal temperature.

Remarks: Each bar-animation ( ,  or ) presents 1•digital accuracy.



FIG.1 (OPTIMAL)



FIG.2 (TOO WARM)



FIG.3 (TOO COOL)

TO SELECT •/• READOUT:

Press •/• switch to select either • or • temperature readout.

The •/• button is in the battery compartment.

AUTO SHUT-OFF FUNCTION

The unit will shut off automatically when no button pressed for 30 minutes.

POWER ON/OFF FUNCTION

To shut off the unit, press and hold the ON/OFF button for 3 seconds.

To turn on the unit, press ON/OFF once.

RESET FUNCTION

If the display does not function properly or the unit fails to respond, press the RESET button. If this does not correct the problem, replace the battery.