

WS 9450 – Instruction manual

Quick setup:

Slide open the battery cover at the back of the station. Remove the plastic strip from the battery compartment. Then replace the battery cover.

°C/°F display:

Press the °C/°F button to switch between the °C (Celsius) or °F (Fahrenheit) temperature display formats.

MIN/MAX display:

Press the MIN/MAX button to view the maximum values for temperature and humidity.

Press the MIN/MAX button again to view the minimum values for temperature and humidity.

Press the MIN/MAX button again to return to current values for temperature and humidity.

Battery replacement:

Slide open the battery cover at the back of the station, then insert 1 x CR2025 Lithium battery to the battery compartment. Make sure "+" polarity of the battery is facing up. Then replace the battery cover.

Specifications:

Temperature:

Measuring range: 0°C to +50°C (32°F to 122°F)
(display shows HH.H / LL.L outside of this range)

Resolution: 0.1°C/ 0.1°F

Accuracy: ± 1°C/ 1°F
(0°C to +40°C/ 32°F to 104°F, ± 2°C/ 2°F outside of this range)

Humidity:

Measuring range: 20% to 95%
(display shows HH.H / LL.L outside of this range)

Resolution: 1%

Accuracy: ± 5% (40% to 80%, ± 8% outside of this range)

Precaution:

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

Batteries safety warnings:

- Please read all instructions carefully before use.
- Use only alkaline batteries, not rechargeable batteries.
- Install batteries correctly by matching the polarities (+/-).
- Always replace a complete set of batteries.
- Never mix used and new batteries.
- Remove exhausted batteries immediately.
- Remove batteries when not in use.
- Do not recharge and do not dispose of batteries in fire as the batteries may explode.
- Ensure batteries are stored away from metal objects as contact may cause a short circuit.
- Avoid exposing batteries to extreme temperature or humidity or direct sunlight.
- Keep all batteries out of reach from children. They are a choking hazard.

Consideration of duty according to the battery law

Old batteries do not belong to domestic waste because they could cause damages of health and environment. End-users are committed by law to bring back needed batteries to distributors and other collecting points!

