

WQ 145

Solar Powered Alarm Desktop Clock

Instruction Manual

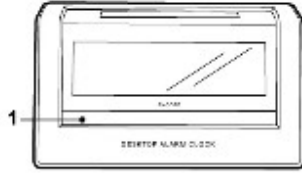


Fig. 1 Front view

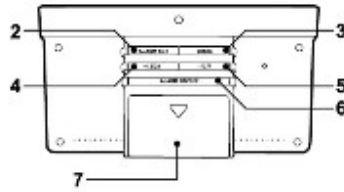


Fig. 2 Back view

Introduction

This solar powered desktop clock comes with calendar, weekday display, and temperature display. It is solar powered with optional backup DC batteries. The light condition in most bright indoor spaces is sufficient to recharge the built-in rechargeable batteries. Exposing the unit to direct sunlight is not suggested and it is not necessary.

- (1) "SNOOZE / LIGHT" button
- (2) "ALARM SET" button
- (3) "MODE" button
- (4) "+/12/24" button
- (5) "-/C/F" button
- (6) "ALARM ON/OFF" button
- (7) Battery compartment

Getting started:

Toggle the "On/Off" switch located under the battery compartment (7) to turn on the clock, Optional batteries installation

1. Open battery compartment (7) on the back of the unit. (see figure 2)
2. Install / replace with 2x "AAA" size batteries in the compartment. It is recommended that only alkaline batteries are used.
3. Replace the battery compartment (7) on the back of the unit.

Batteries safety warnings:

1. Please read all instructions carefully before use.
2. Install batteries correctly by matching the polarities (+/-).
3. Always replace a complete set of batteries.
4. Never mix used and new batteries.
5. Remove exhausted batteries immediately.
6. Remove batteries when not in use.
7. Do not recharge and do not dispose of batteries in fire as the batteries may explode.
8. Ensure batteries are stored away from metal objects as contact may cause a short circuit.
9. Avoid exposing batteries to temperature or humidity extremes or direct sunlight.
10. Keep all batteries out of reach from children. They are a choking hazard.
11. Please retain packaging for future reference.

To set time manually:

1. When the time is showing, press and hold "MODE" button (3) until the

digits are flashing.

2. Press "+/12/24" button (4) or "-/C/F" button (5) to change the hour setting. Press "MODE" button (3) to confirm.
3. Press "+/12/24" button (4) or "-/C/F" button (5) to change the minute setting. Press "MODE" button (3) to confirm.
4. Press "+/12/24" button (4) or "-/C/F" button (5) to change the second setting. Press "MODE" button (3) to confirm.
5. Press "+/12/24" button (4) or "-/C/F" button (5) to change the year setting. Press "MODE" button (3) to confirm.
6. Press "+/12/24" button (4) or "-/C/F" button (5) to change the date/month and month/date setting. Press "MODE" button (3) to confirm.
7. Press "+/12/24" button (4) or "-/C/F" button (5) to change the month setting. Press "MODE" button (3) to confirm.
8. Press "+/12/24" button (4) or "-/C/F" button (5) to change the date setting. Press "MODE" button (3) to confirm.
9. Press "+/12/24" button (4) or "-/C/F" button (5) to change the calendar language setting. *EN* for English; *GE* for German; *SP* for Spanish; *IT* for Italian; *FR* for French. Press "MODE" button (3) to confirm.
10. The digits will stop flashing.

To activate LCD backlight

1. Press "SNOOZE / LIGHT" button (1) to turn on LCD backlight for approximately 3 seconds.



AM / PM and 24-hour clock setting

2. Press "+/12/24" button (4) to toggle between AM / PM and 24-hour clock setting when the time is shown.

To set alarm time:

1. Press "ALARM SET" button (2) to display alarm time.
2. Press and hold "ALARM SET" button (2) until the alarm time digits are flashing.
3. Press "+/12/24" button (4) or "-/C/F" button (5) to change the minute setting. Press "ALARM SET" button (2).
4. Press "+/12/24" button (4) or "-/C/F" button (5) to change the hour setting. Press "ALARM SET" button (2).
5. The digits will stop flashing.
6. Press "MODE" button (3) to display the temperature.

Alarm time:

1. Press "ALARM ON / OFF" button (6) once to active the preset alarm.  will be shown when the alarm is on.
2. Press "ALARM ON / OFF" button (6) once more to active the snooze function.  will be shown when the alarm is on.
3. Press "ALARM ON / OFF" button (6) again to turn off alarm.
4. When the alarm goes off, press any button on the back to deactivate the alarm.

5. When the alarm goes off, press “SNOOZE/LIGHT” button (1) to activate the snooze. The alarm will go off again in 5 minutes. Repeat the above instructions to activate snooze again or deactivate the alarm.

Setting the Thermometer

1. Touch “-/C/F” button (5) to toggle between Fahrenheit and Celsius.

Battery Law

Consideration of duty according to the battery law

Old batteries don't belong to domestic waste because they could cause damages of health and environment. End-user are committed by law to bring back needed batteries to distributors and other collecting points.

